

EAGLE EQUIPMENT, INC. D.B.A.

PEIRCE-EAGLE EQUIPMENT CO.

SPECIALISTS IN PIPE CLEANING & PIPE INSPECTION EQUIPMENT

3388 US 22 WEST, BRANCBURG, NJ, 08876 WWW.PEIRCEEAGLE.COM T: 908-203-0999 F: 908-203-5211

WINTERIZATION STEP-BY-STEP INSTRUCTIONS

1. Drain all water from water tanks.
2. Remove nozzle from sewer cleaning hose.
3. Start auxiliary engine and operate at idle speed.
4. Start truck chassis engine and operate at idle speed.
5. Turn the hose reel water selector valve and the pump control valve on the front of the hose reel to the ON position.
6. Connect air purge coupling to the air purge fitting located below the air purge valve.
7. Turn air purge valve on water pump to the ON position.
8. Allow air to purge water from sewer cleaning hose.
9. When sewer cleaning hose is free of water, rotate hose reel clockwise until all water is out.
10. Turn OFF air purge valve, pump control valve, and hose reel water selector valve.
11. Remove handgun and plug from the handgun connection.
12. Turn ON handgun valve.
13. Turn ON pump control valve.
14. Turn ON air purge valve and wait for all water to be blown from handgun system.
15. Turn OFF pump control valve.
16. Turn OFF handgun valve.
17. Turn OFF air purge valve.
18. Turn ON debris body flushout valve.
19. Turn ON pump control valve.
20. Turn ON air purge valve and wait for all water to be blown from debris body flushout system.
21. Turn OFF pump control valve.
22. Turn OFF pump control valve.
23. Turn OFF air purge valve.
24. Turn ON all three drain valves on front of pump.
25. Turn ON air purge valve and wait for water to be blown out of pump.
26. Turn OFF air purge valve.
27. Disconnect air purge coupling. If this step is not done, damage to air brake system could occur.
28. Turn OFF auxiliary engine.
29. Turn OFF auxiliary engine.
30. Remove drain caps from water system fittings under bumper, curb side.

